

Bottom Bracket Specifications



PROPER USE

All components need to match/be compatible with the bike frame manufacturing recommendations. They must also be compatible with the bike frame manufactures recommendations for crank systems. Our bearings should not be used with other manufactures cups and should not be remove from our cups for other purposes. We recommend that an authorized dealer do the installation of all bottom brackets. If you choose to do the installation yourself please follow the bike frame manufactures guide. Improper installation, use, abuse or neglect will void the warranty.

CARE/MAINTENANCE

All bearings used by Hawk-Racing are maintenance free. **NEVER REMOVE BEARING SEALS OR DIRECTLY LUBRICATE THE BALL BEARINGS.** Our bearings do not require special maintenance; however, we do recommend that you occasionally clean your high-quality bottom bracket to guarantee a long-lasting life. Use only water and mild soap when cleaning the crankset and bottom bracket.

Do NOT use a pressure washer. Do NOT remove the seal on the bearings. Our bearings are maintenance free.

After washing your bike use a Dust Removal Spray to dry your bottom bracket. This will remove moisture from the bottom bracket. Dust Removal Spray is available at your local Office Supply Store. If you remove the bearings from your bike either in or out of their cup make sure the cup is completely dry before replacing the bearings. Also, you must re-grease the outer surface of the bearings with White Lightning Crystal Grease before reinstalling the bearings into the cup and/or frame. If you have any questions, please contact us at usa@hawk-racing.com.

Failure to follow our manufacturing recommendations for installation and care/maintenance will void the warranty.

Rev. A © HAWK RACING™ Corporation 2009

www.hawk-racing.com

FOLMER
technology®